

Garages

Garages - Autobody Frame Straightening

On this page

[What should I know about hydraulic devices in alignment machines?](#)

[What are some tips for frame or unibody straightening?](#)

[What should I check before starting a job?](#)

What should I know about hydraulic devices in alignment machines?

Hydraulic devices can be dangerous, whether used as a frame straightener or lift. Also refer to [Garages - Hydraulic Lifts - General](#) and [Garages - Hydraulic Lifts - Operation](#) for more information. Make sure you have received education and training before using an alignment machine.

Autobody straightening uses hydraulic power attached to a series of clamps, hooks, chains and pullies. Clamps are attached when straightening the frame of the vehicle.

The clamp used for pulling may let go for several reasons:

- The clamp teeth may be dirty or worn.
- The clamp may have been fastened to the undercoating rather than to the metal itself.
- The clamp may not have been tightened enough.
- The metal may give way, especially from a rusted panel.
- The chain or clamp may break.

What should I check before starting a job?

Before starting a pulling job:

- Clean the teeth of clamps regularly with a wire brush.
- Inspect clamps and chains for wear. Replace clamps that have worn teeth.

- Replace the chain if it is nicked or otherwise damaged. Replace all chains at regular intervals, regardless of wear.
 - Follow the vehicle manufacturer's instructions regarding where the clamp must be placed and how many clamps are necessary.
 - Remove all undercoating where the clamp is attached.
 - Tack weld a metal brace to the panel for support before attaching the clamp, especially if clamping to a rusted panel.
 - Make sure the vehicle is properly anchored and blocked. Have the vehicle on its wheels or bolted to mobile safety stands when pulling. This step prevents the vehicle from falling off the stand during the pull.
-

What are some tips for frame or unibody straightening?

Follow these procedures when using collision repair equipment:

- Inspect clamps and chains before each use.
- Secure frame to a link in good condition.
- Wrap the chain around a frame member several times. Do not twist the chain.
- Place padding around sharp corners of frame members that rub against the chain links.
- Make sure that the chain hook is connected to a link with a firm grip. Test it before applying hydraulic pressure.
- Place a heavy blanket over the chain and clamp before pulling to minimize fly-back if the chain breaks.
- Follow the instructions from both the vehicle and alignment machine manufacturers regarding pull force.
- Stand to one side of the chain, not behind it. Stand behind a strong acrylic plastic or safety glass shield during all but the lightest pulls.
- Use two or more chains for pulls that require a great deal of force.
- Reinforce weak parts before pulling.
- Check the level of hydraulic fluid.
- Inspect hoses and connections frequently for leaks and general condition.
- Screw all body attachments on tightly. Avoid damaging threads on the attachments.
- Replace damaged links with the same quality and size of the link. Do not use temporary threaded links for high-force applications.

Disclaimer

Although every effort is made to ensure the accuracy, currency and completeness of the information, CCOHS does not guarantee, warrant, represent or undertake that the information provided is correct, accurate or current. CCOHS is not liable for any loss, claim, or demand arising directly or indirectly from any use or reliance upon the information.